



Flute Headjoint Cork Tool Set Item #227023



Thanks for ordering our #227023 Flute Headjoint Cork Tool Set.

Purpose:


This tool allows you to remove a flute headjoint cork, and replace it in the same position it was before removal.

Directions:

1. Remove crown

2. Adjust tool to existing cork depth (Fig. 1)

Insert the "B" tool into the headjoint, and adjust the rod until the end touches the cork, and the headjoint rests against the tool.

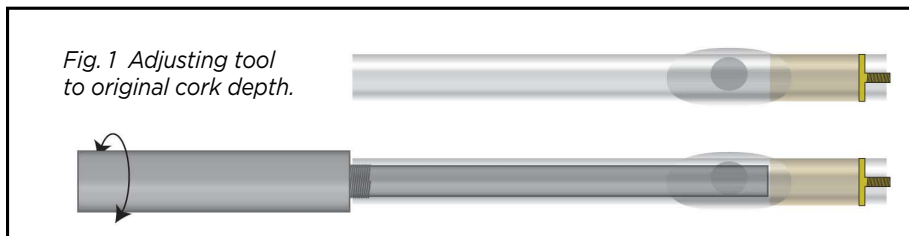

3. Remove the headjoint cork (Fig. 2)



Use the "A" tool to remove the cork as shown in figure. Insert the "A" tool, firmly grasp the headjoint and tap the tool and headjoint against the work surface. This will drive the cork up and out.

3. Remove the headjoint cork (Fig. 2)

Use the "A" tool to remove the cork as shown in figure. Insert the "A" tool, firmly grasp the headjoint and tap the tool and headjoint against the work surface. This will drive the cork up and out.

4. Install new cork

The "B" tool is used to push the new headjoint cork back to its previously installed position.

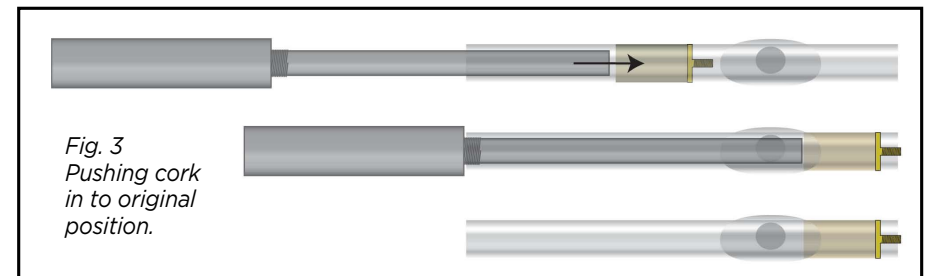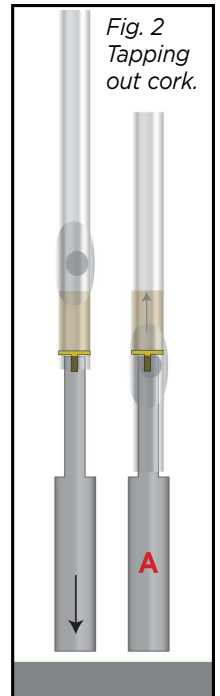

Enjoy!



901 Blairhill Road, Suite 400, Charlotte, NC 28217
800.659.6073 • 704.521.1088 • www.jlsmithco.com • sales@jlsmithco.com